


Spare Parts  
**Lance ST-85 push and pull**  
 Item-No. 20 0085 675

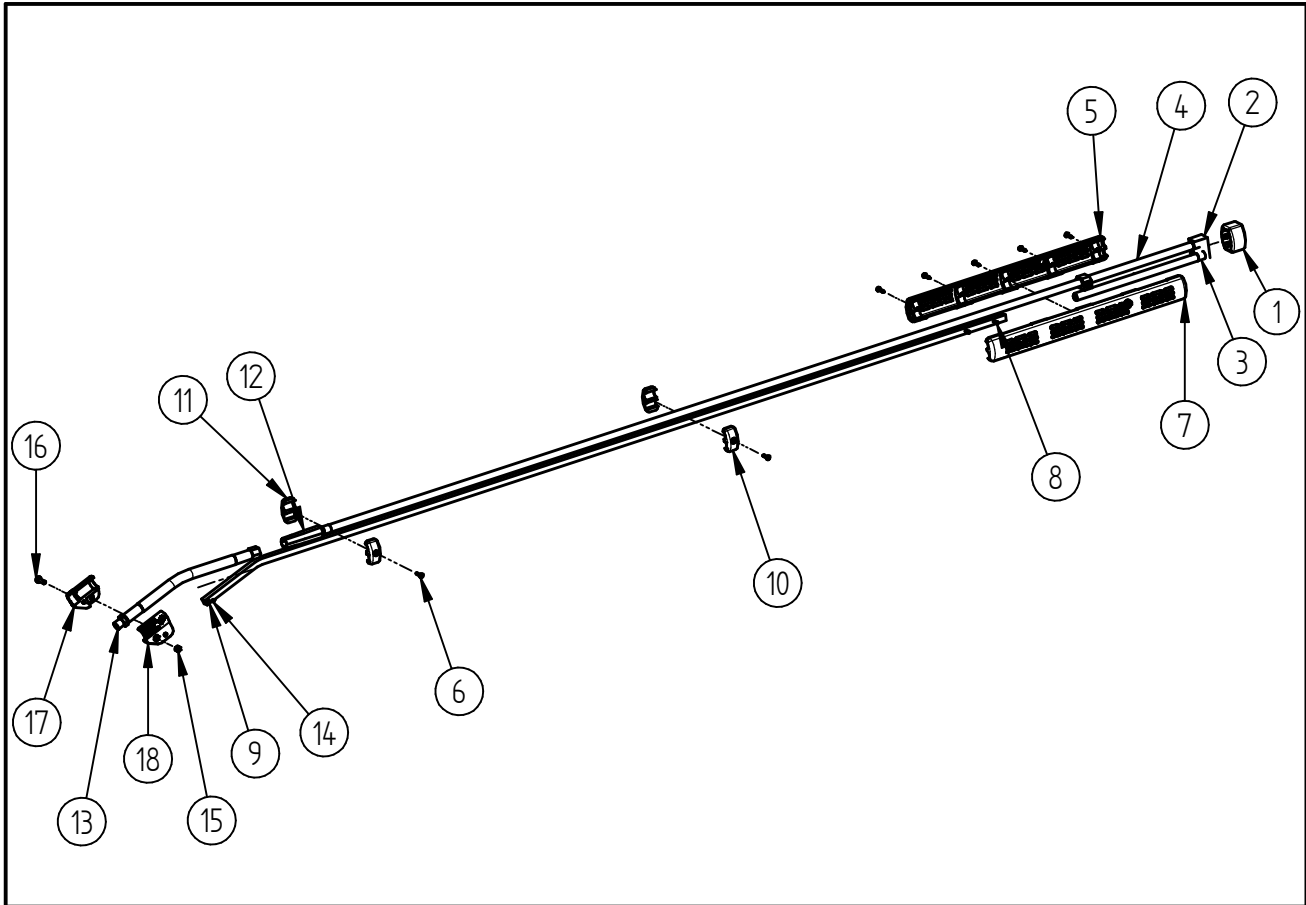

Pos.	Item-No.	Description
1	02 0002 770	Cover housing
2	01 0002 200	Housing
3	07 0000 435	Lance 250mm
4	07 0017 008	Stainless steel pipe 1700mm
5	02 0002 750	Semi casing (1)
6	04 0000 051	Screw 3.5x16
7	02 0002 760	Semi casing (2)
8	04 0002 885	Straight pin 4x30
9	03 0000 295	Aluminium bar
10	02 0002 790	Clamp (2)
11	02 0002 780	Clamp (1)
12	02 0007 530	Shrinkdown plastic tube

Pos.	Item-No.	Description
13	20 0085 300	Hose
14	04 0002 880	Straight pin 5x20
15	04 0002 865	Nut M5
16	04 0002 870	Screw M5x16
17	02 0007 510	Hose holder right
18	02 0007 500	Hose holder left
19	01 0005 030	Bracket

### Repair-Kits

Pos.	Item-No.	Description	Pos.	Item-No.	Description
.					