


Spare Parts  
**Unloader ST-260**  
Item-No. 20 0260 730

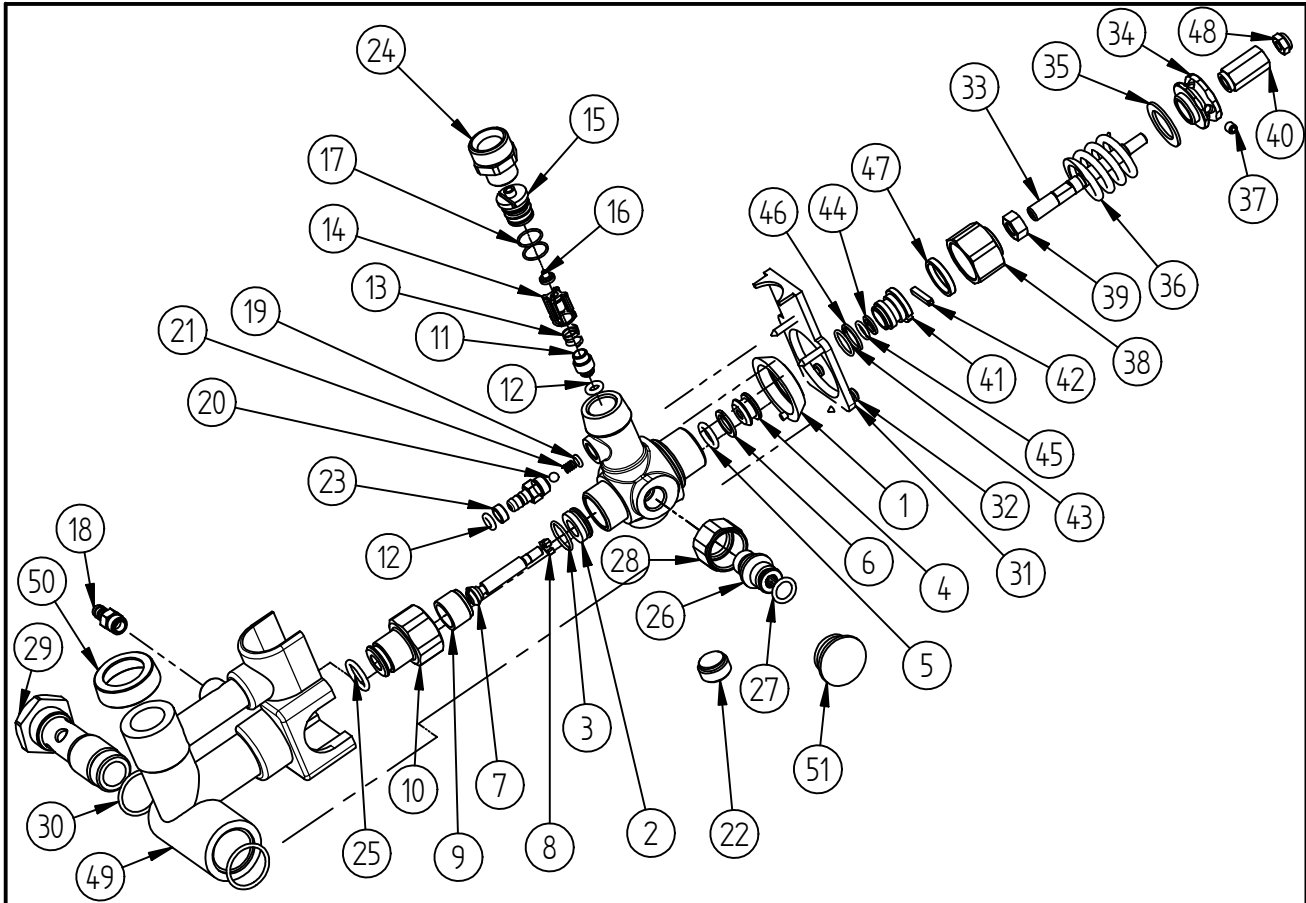

Pos.	Item-No.	Description
1	02 0001 350	label ring
2	04 0000 420	seal seat
3	05 0000 430	O-ring 15x15
4	04 0000 410	piston
5	05 0000 410	O-Ring
6	05 0000 420	Back ring
7	04 0000 430	Close road
8	02 0001 480	Lead part
9	01 0001 770	spacer
10	10 0001 691	Coupling nut
11	04 0000 440	Valve part
12	05 0000 051	O-Ring 5x25
13	06 0000 310	Spring
14	02 0001 290	Valve cage
15	01 0001 810	housing injector
16	01 0001 830	nozzle 2,1
17	05 0000 440	O-ring
18	01 0000 200	muzzle
19	05 0000 070	O-Ring
20	06 0000 110	Stainless steel ball
21	06 0000 120	Spring
22	01 0000 365	locking screw
23	01 0003 170	distance ring
24	01 0000 551	nipple
25	05 0000 550	O-ring 14x25
26	01 0000 641	coupling nipple

Pos.	Item-No.	Description
27	05 0000 120	O-ring 10x2,2
28	01 0000 719	coupling nut
29	01 0003 165	fixing screw
30	05 0000 900	O-ring 22x2
31	02 0002 080	cap
32	04 0000 050	Screw
33	04 0000 507	pull rod
34	10 0001 700	Adjusting nut
35	02 0001 341	Guide ring
36	06 0000 301	Spring
37	04 0001 630	headless screw
38	01 0001 642	coupling nut
39	04 0001 610	Hex nut M8x1
40	01 0004 480	Adjusting nut
41	01 0001 660	guide piece
42	01 0001 650	locking pin
43	05 0000 380	O-ring 13x15
44	05 0000 390	Back ring
45	05 0001 350	O-Ring 7,65x178
46	05 0000 425	Back ring
47	02 0001 280	holding ring
48	04 0001 621	Nut M6
49	02 0002 070	housing
50	01 0001 692	reinforcement ring
51	02 0002 190	plastic cap

## Repair-Kits

Pos.	Item-No.	Description	Pos.	Item-No.	Description
*					