


Spare Parts  
**Unloader ST - 261**  
 Item-No. 20 0261 560

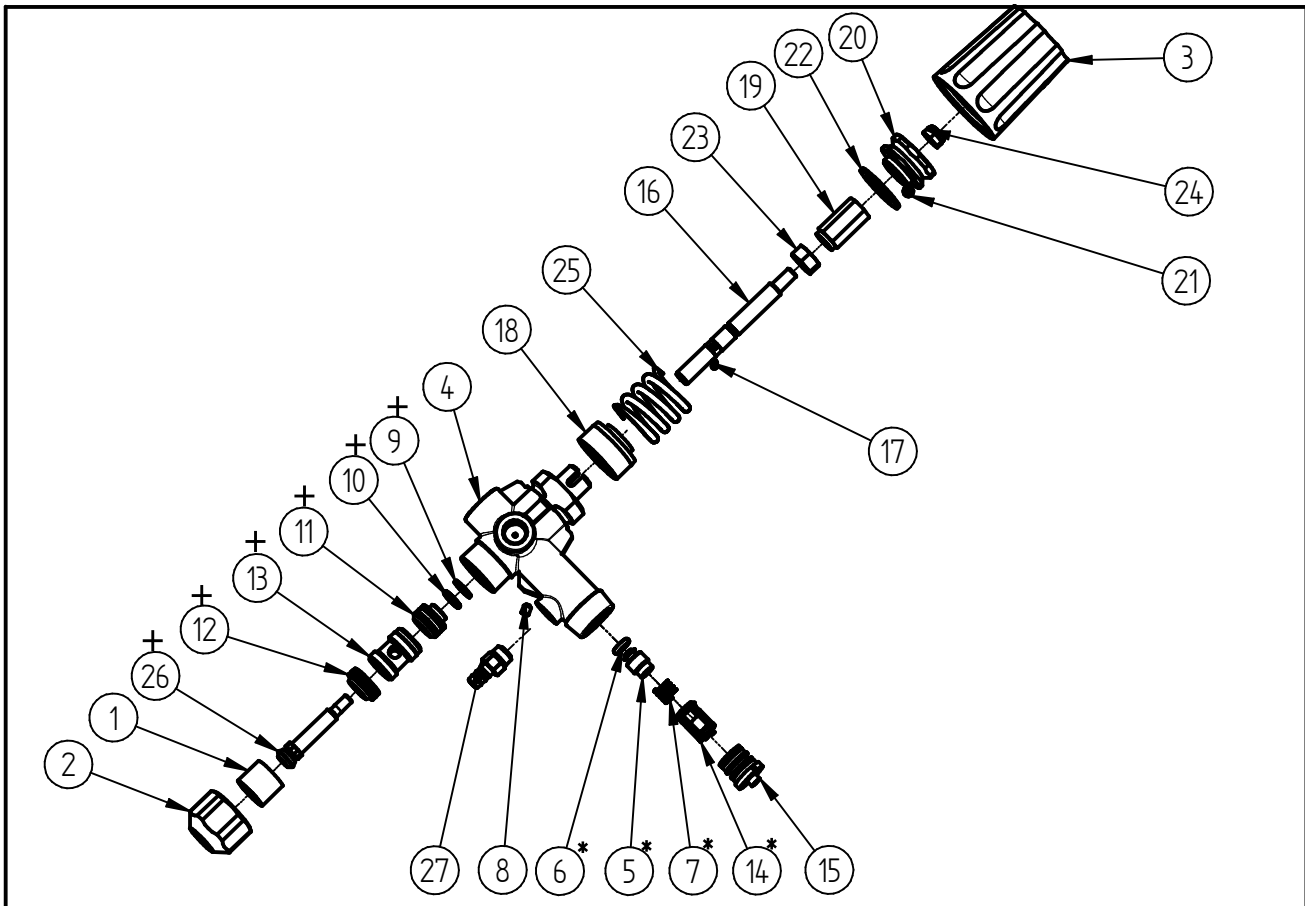

Pos.	Item-No.	Description	Pos.	Item-No.	Description
1	01 0001 790	Distance bushing	16	04 0000 406	Pull rod
2	01 0001 690	Cap nut	17	04 0001 490	Cylinder pin
3	20 0260 547	Hand wheel complete	18	02 0002 850	Bushing
4	01 0001 680	Brass housing	19	01 0004 480	Adjusting nut
5	04 0000 440	Valve part	20	10 0001 700	Adjusting nut
6	05 0000 051	O-Ring 5x2,5	21	04 0001 630	Hex. socket head screw
7	06 0000 310	Spring	22	02 0001 341	Glide ring
8	04 0001 270	Hex. socket head screw M4x5	23	04 0001 610	Hex nut M8x1
9	05 0000 390	Back ring	24	04 0001 621	Nut M6
10	05 0001 350	O-Ring 7,65x1,78	25	06 0000 301	Spring
11	20 0261 529	Section assembly piston	26	20 0260 520	Section assembly close road
12	20 0261 524	Section assembly seat	27	20 0060 720	Hose nozzle + check valve
13	01 0004 250	Restrictions part			
14	02 0001 290	Valve cage			
15	20 0260 555	Injektor part with nozzle 1,8			

### Repair-Kits

Pos.	Item-No.	Description	Pos.	Item-No.	Description
*	20 0261 528	Repair- Kit "A"	+	20 0261 526	Repair- Kit ST-261