


Spare Parts
Unloader ST-291
 Item-No. 20 0291 500

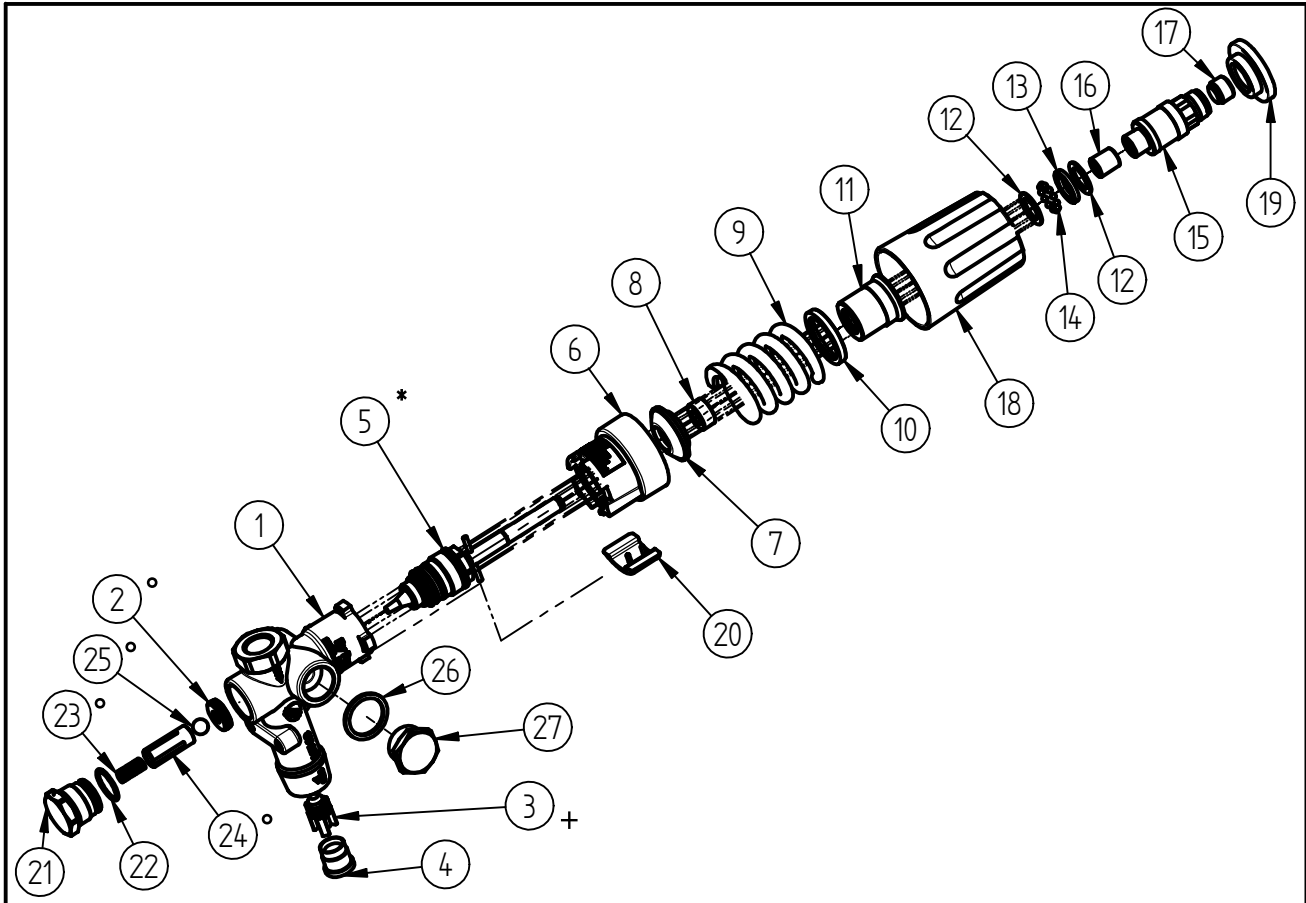

Pos.	Item-No.	Description	Pos.	Item-No.	Description
1	01 0001 695	housing ST-291	15	01 0009 020	adjusting screw
2	20 0291 465	Seal Seat	16	01 0009 115	arresting screw
3	20 0291 480	check valve	17	01 0000 356	locking screw
4	01 0001 700	protection screw	18	02 0012 055	handle
5	20 0291 470	Piston Rod	19	02 0012 065	locking screw
6	02 0012 060	spring adaptor	20	02 0012 070	clip
7	01 0009 030	compensating disk	21	01 0009 105	screw
8	10 0004 460	adjusting ring	22	05 0001 021	O-ring 17 x 15
9	06 0002 065	pressure spring	23	06 0002 085	pressure spring
10	01 0009 025	plate	24	02 0012 105	ball receiver
11	01 0009 100	spring guide	25	06 0000 740	steel ball
12	04 0001 720	Pressure washer	26	01 0003 295	sealing ring
13	02 0003 370	Roller holder	27	01 0000 375	plug
14	06 0000 900	Stainless steel ball			

Repair-Kits

Pos.	Item No.	Description	Pos.	Item No.	Description
*	20 0291 495	Repair-Kit Piston Rod	+	20 0291 490	Repair-Kit Check Valve
°	20 0291 485	Repair-Kit Seal Seat			