


Spare Parts  
Unloader ST - 261  
Item-No. 20 0261 500

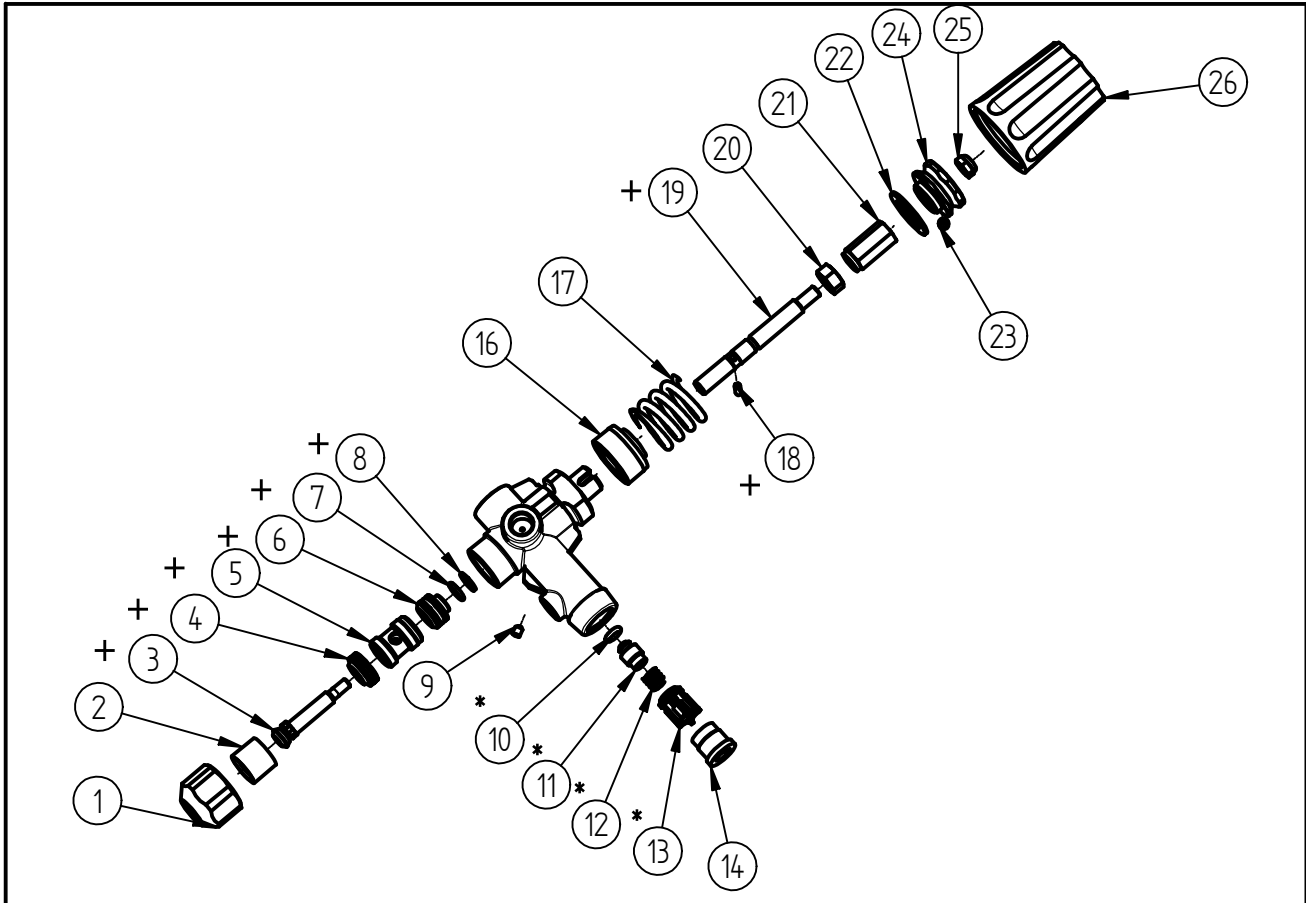

Pos.	Item-No.	Description	Pos.	Item-No.	Description
1	01 0001 690	Cap nut	16	02 0002 850	Bushing
2	01 0001 790	Distance bushing	17	06 0000 301	Spring
3	20 0260 520	Section assembly close road	18	04 0001 490	Cylinder pin
4	20 0261 524	Section assembly seat	19	04 0000 406	Pull rod
5	01 0004 250	Restrictions part	20	04 0001 610	Hex nut M8x1
6	20 0261 529	Section assembly piston	21	01 0004 480	Adjusting nut
7	05 0001 350	O-Ring 7,65x1,78	22	02 0001 341	Slide ring
8	05 0000 390	Back ring	23	04 0001 630	Hex. socket head screw
9	04 0001 270	Hex. socket head screw M4x5	24	10 0001 700	Adjusting nut
10	05 0000 051	O-Ring 5x2,5	25	04 0001 621	Nut M6
11	04 0000 440	Valve part	26	20 0260 547	Hand wheel complete
12	06 0000 310	Spring			
13	02 0001 290	Valve cage			
14	01 0001 700	protection screw			

### Repair-Kits

Pos.	Item-No.	Description	Pos.	Item-No.	Description
*	20 0261 528	Repair- Kit "A"	+	20 0261 526	Repair- Kit ST-261