


Spare Parts
Unloader ST-261
Item-No. 20 0261 655

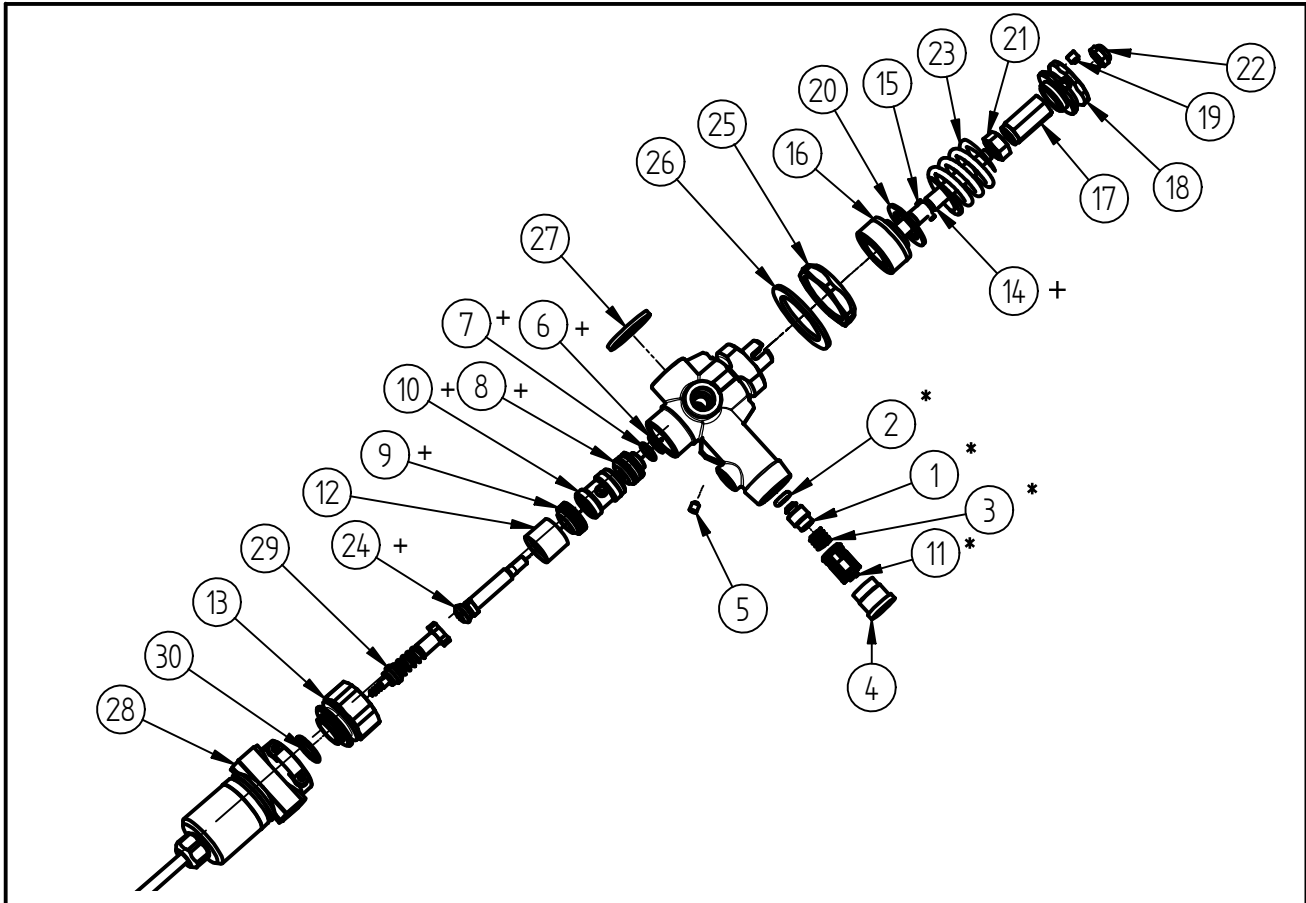

Pos.	Item-No.	Description	Pos.	Item-No.	Description
1	04 0000 440	Valve part	16	02 0002 850	Bushing
2	05 0000 051	O-Ring 5x2,5	17	01 0004 480	Adjusting nut
3	06 0000 310	Spring	18	10 0001 700	Adjusting nut
4	01 0001 700	protection screw	19	04 0001 630	Hex. socket head screw
5	04 0001 270	Hex. socket head screw M4x5	20	02 0001 341	Glide ring
6	05 0000 390	Back ring	21	04 0001 610	Hex nut M8x1
7	05 0001 350	O-Ring 7,65x1,78	22	04 0001 621	Nut M6
8	20 0261 529	Section assmbly piston	23	06 0000 301	Spring
9	20 0261 524	Section assmbly seat	24	20 0260 520	Section assmbly close road
10	01 0004 250	Restrictions part	25	01 0003 150	Nut
11	02 0001 290	Valce cage	26	04 0001 640	Plate
12	01 0001 790	Distance bushing	27	04 0001 670	plate
13	04 0003 760	Cap nut	28	20 0261 515	Micro switch ST-261
14	04 0000 406	Pull rod	29	20 0261 530	Switch rod complete
15	04 0001 490	Cilinder pin	30	05 0000 503	O-Ring

Repair-Kits

Pos.	Item-No.	Description	Pos.	Item-No.	Description
*	20 0261 528	Repair Kit A	+	20 0261 526	Repair Kit ST-261