

User Manual of easywash365+ foam set



easywash365+ foam lance standard with foam head ST-75, injector ST-160 with metering valve ST-161, suction hose and suction filter. Product code: 200 160 720 / 200 160 725



Description

By means of this foam set the user has the possibility to rinse as well as to put on foam without having to convert anything. There are 2 spray guns at the user's disposal and he may choose between hp-cleaner, clear water or chemical for foaming.

Safety



Hazard!

If these instructions are not followed there is a danger of physical injury, danger to life and material damage!



Please comply with the Operating Instructions! Incorrect operation can lead to serious injury. Read the Operating Instructions before you use the appliance.



General safety notes

- To guarantee a safe operation the injector unit may only be used in accordance with these Operating Instructions.
- Keep these Operating Instructions in a safe place for later reference.
- Please also observe the safety instructions for the detergent and if applicable of the high pressure cleaner manufacturer.
- Do not mix detergents one with the other.
- Wear suitable protective clothing and gloves when working.
- Never direct the high pressure jet at persons or other living creatures.
- Read the safety data sheets carefully and observe the corresponding safety and handling regulations.
- Fitting, switching on, operation and maintenance may only be carried out by skilled and authorized personnel.
- An operation with damaged components is forbidden. Damaged components need to be immediately replaced.



Info

In addition, the required safety and legal regulations for the respective type of use must be observed. This also applies to all accessories used.




Intended Use

- This device may only be operated with an appropriate pressure generator.
- This device is not designed for the use by persons (children included) having limited physical, sensory and mental capabilities due to a lack of experience and/or a lack of knowledge unless they are supervised by a person who is responsible for their safety or they have received instructions from that person regarding the use of the device.
- As a matter of principle it is strictly forbidden that children use this device.

User Manual of easywash365+ foam set

easywash365+ foam lance standard with foam head ST-75, injector ST-160 with metering valve ST-161, suction hose and suction filter. Product code: 200 160 720 / 200 160 725

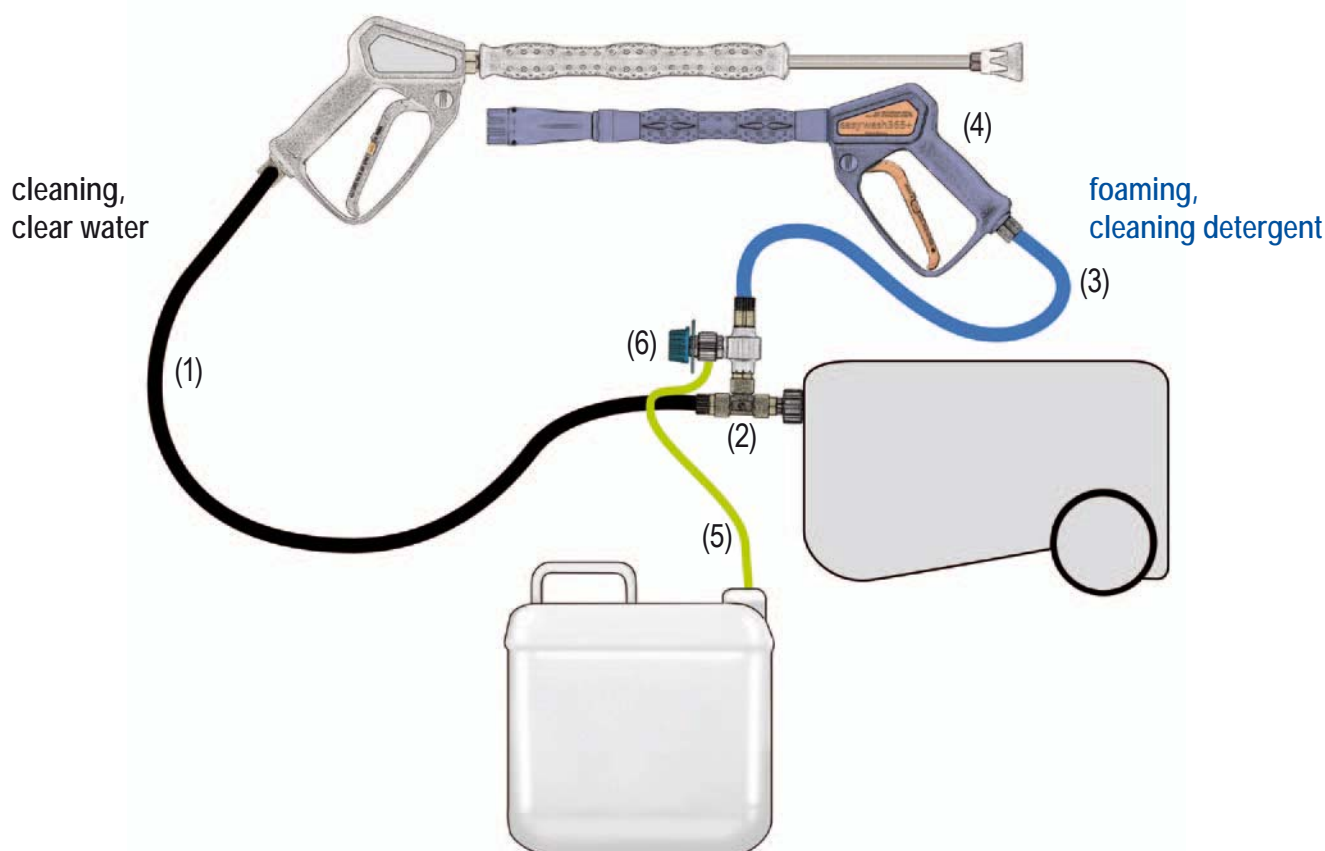

Before switching on

- The available hp-hose (1) with the hp-spray gun need to be disassembled from the device.
- The T-piece of the foam set (2) needs to be fixed.
- The available hp-hose (1) needs to be attached to the other side of the T-piece (2).
- The optional hp-hose (3) (length up to 40 m at DN 10 / length up to 20 m at DN 8) needs to be connected to the male thread of the injector. Afterwards, the high pressure foam lance (4) is fixed.
- The suction hose (5) is put into the container with chemicals.
- The desired dosing is realized by means of the metering valve (6) positioned at the injector.

Technical data

version	200 160 720	200 160 725
max. pressure	310 bar	250 bar
max. temperature	90 °C	90 °C
suction hose	1 m, DN 9	1 m, DN 9
max. length of hp-hose	40 m, DN 10 20 m, DN 8	40 m, DN 10 20 m, DN 8
connections	M22 F + 2 x M22 M	Coupling / Plug ST-45-250+ 1 x M22 M
foam head ST-75	1.9 mm	1.9 mm